
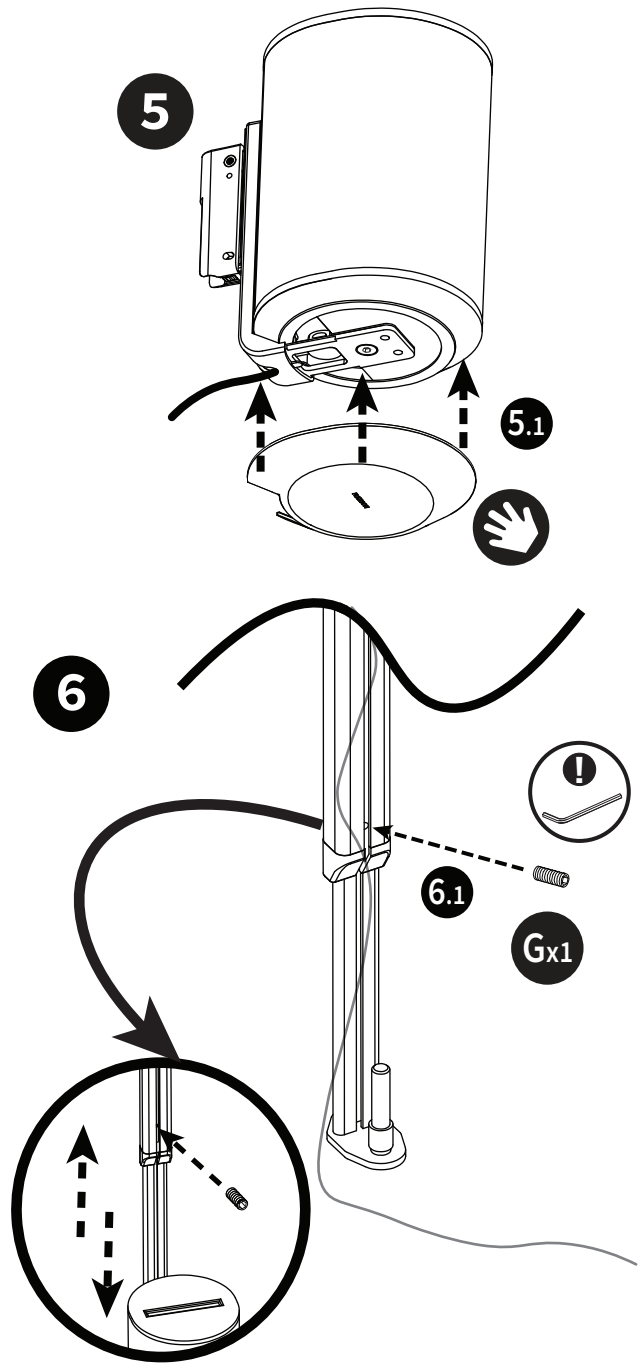
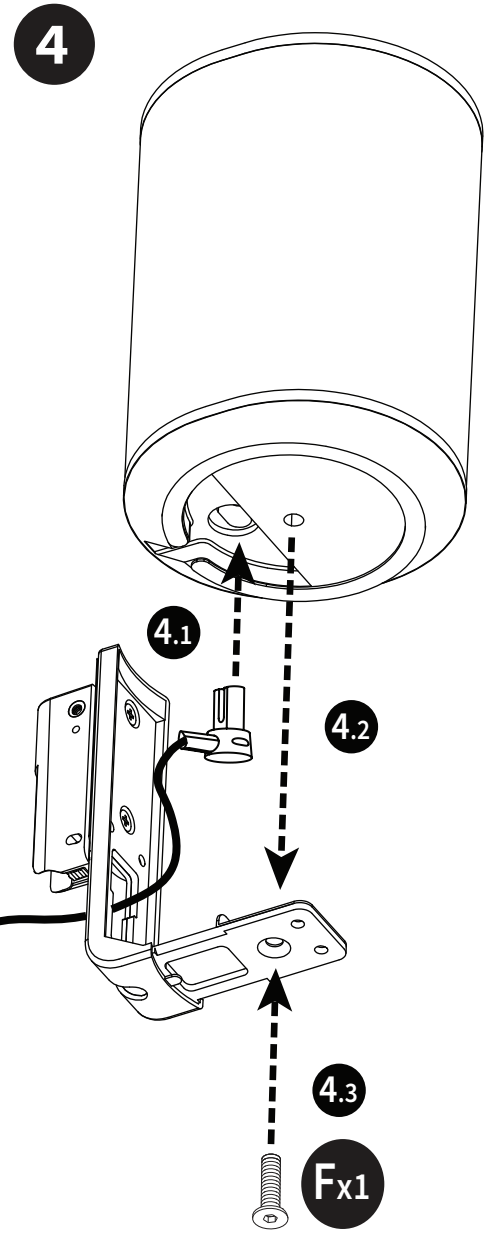
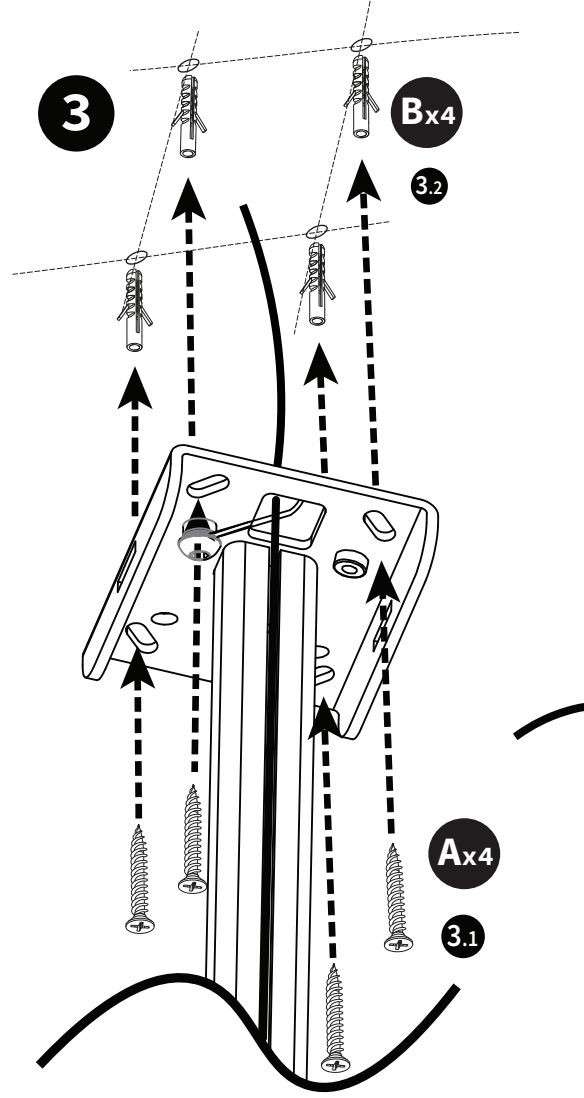
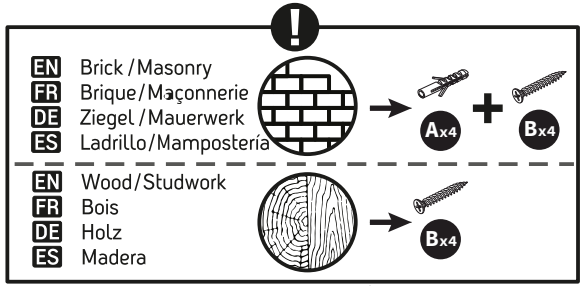
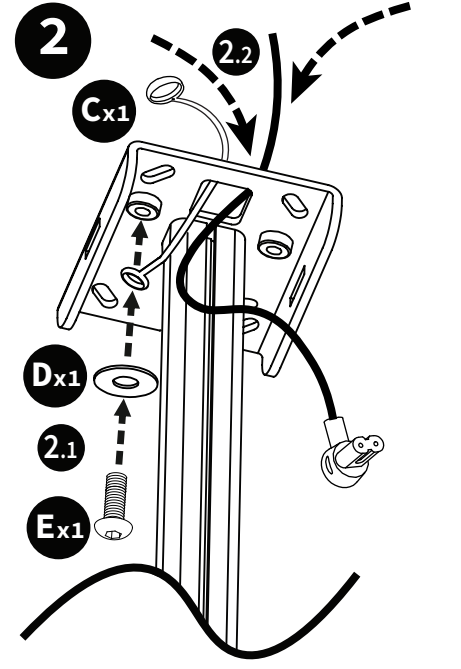
 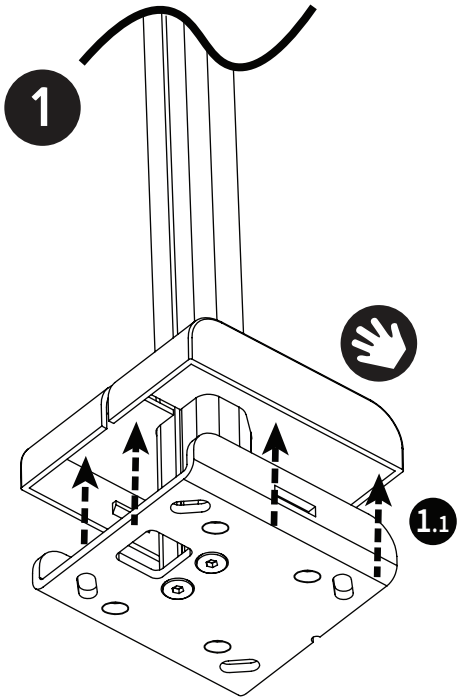


FLEXSON**E100-ACM**


ACCESSORIES FOR SONOS

A	B	C	D	E	F	G	H	I	
x4	x4	x1	x1	x1	x1	x1	x2	x2	2mm/3mm/4mm X1


EN Also required
 FR Également requis
 DE Ebenfalls benötigt
 ES También se requiere




7

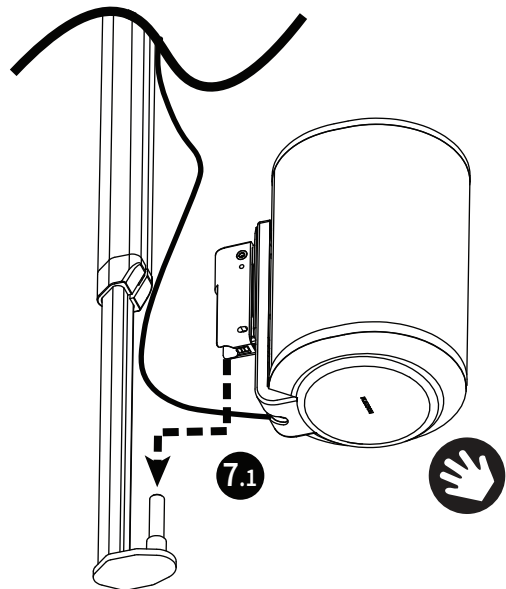

8

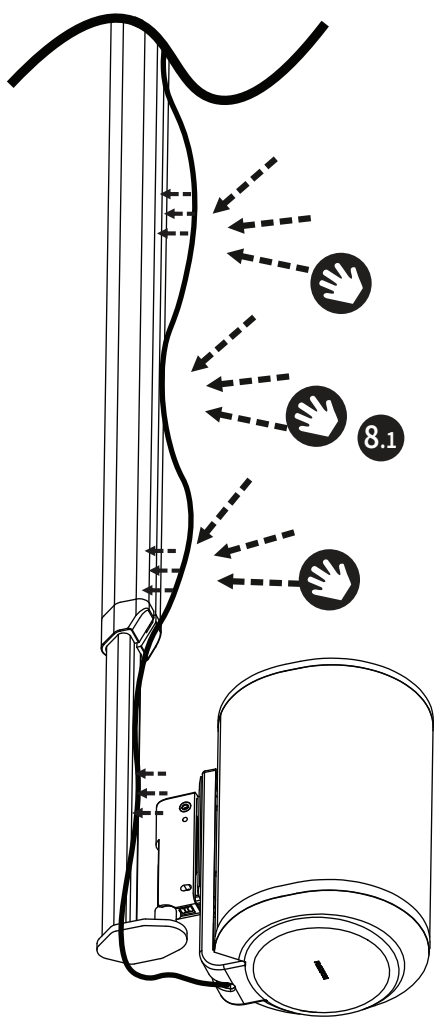

9

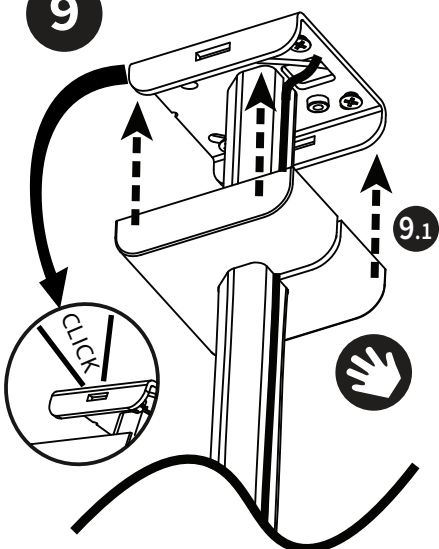

- A** Plastic Wall Plug (8mm Fixing Hole 40mm Long)
- B** 5mm x 50 Long Fully Threaded Pan Headed Pozi Drive Screw
- C** Safety / Security Cable
- D** M5 Flat Washer
- E** M5 10mm Button Head Hex Drive Screw / Bolt
- F** M5 x 12mm Countersunk Head Hex-drive Screw / Bolt
- G** M4 6mm Hex Drive Grub/Set Screw
- H** M5 x 20mm Countersunk Head Hex-drive Screw / Bolt
- I** M6 x 20mm Countersunk Head Hex-drive Screw / Bolt
- 2mm / 3mm / 4mm Hex Key Wrench

- EN** Inverted Speaker mounting
- FR** Fixation inversée de l'enceinte
- DE** Umgedrehte Lautsprechermontage
- ES** Montaje de altavoz invertido

